


# 12 Inch Recessed Linear Dot Downlight Installation


## Recessed With Trim




1. Cutout on the ceiling,  
Cutout size:  
10 heads: L319\*W44\*H60mm(12.76"\*1.76"\*2.4")

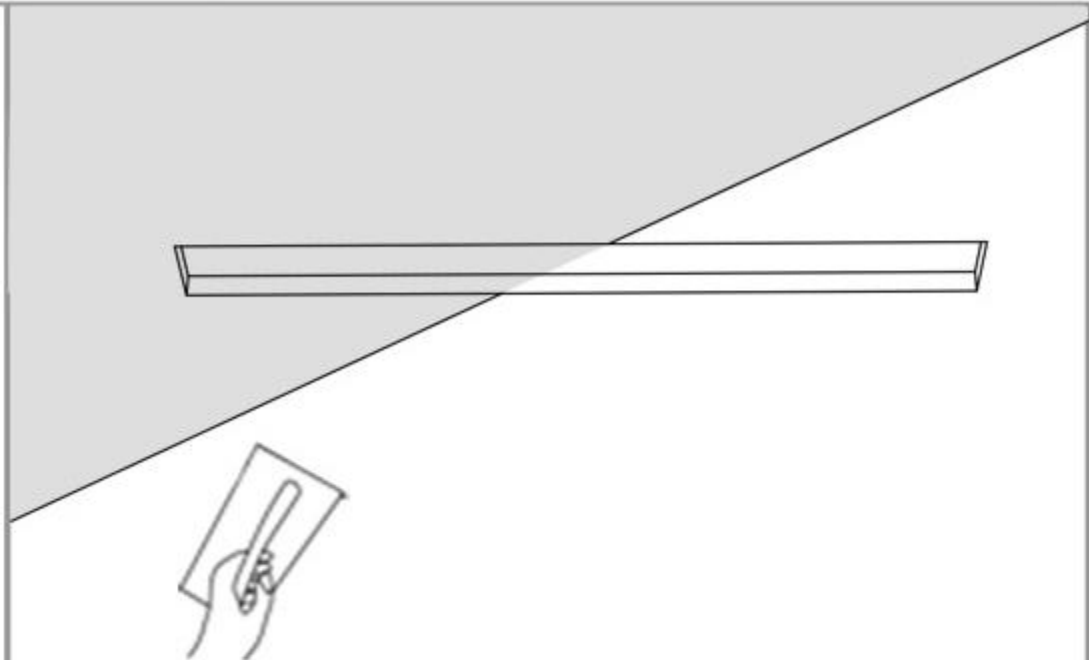


2. Plaste-mesh-putty-paint, finishing the ceiling

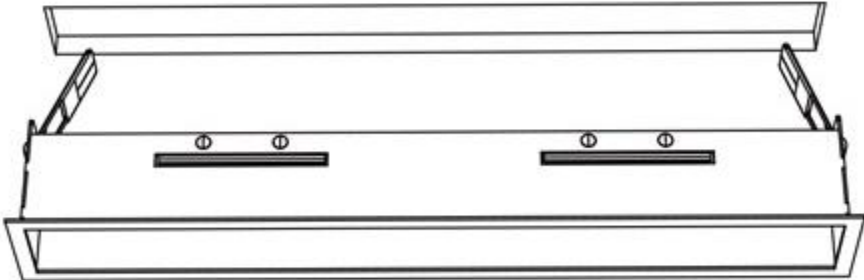


3. After the paint dry enough,  
install the embedded part

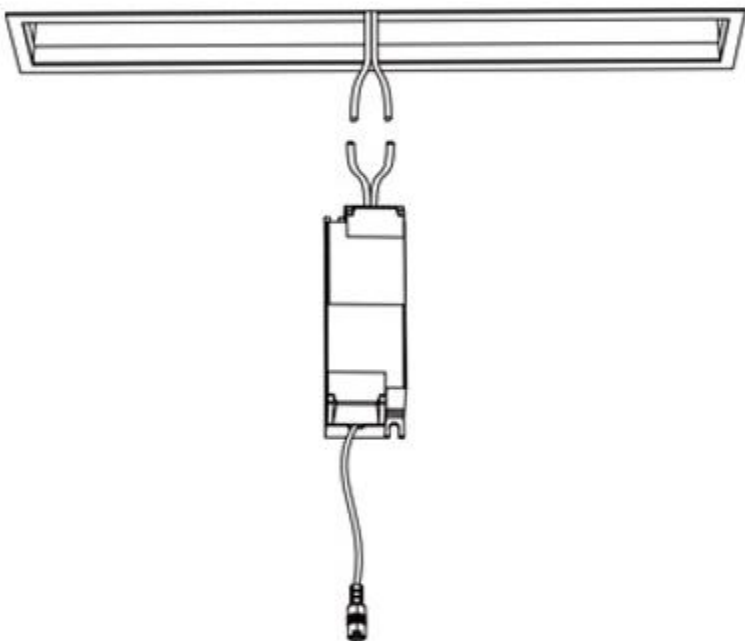

4. Wire the driver

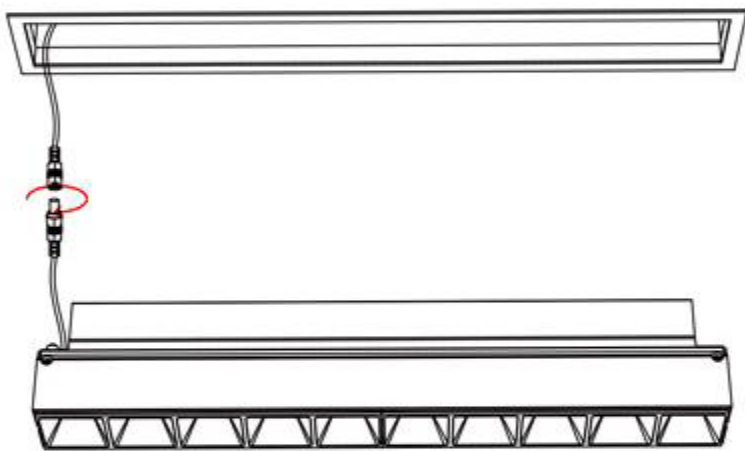

5. Plug in the light

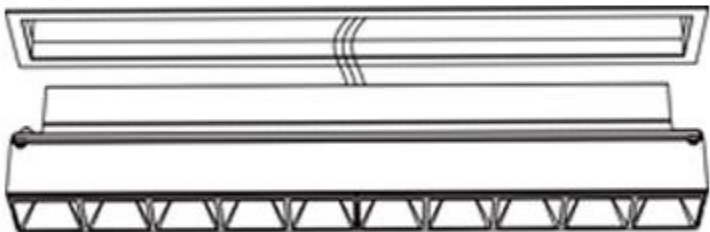

6. Click the light on



7. Done



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- POWER OFF!!! NOT HOT PLUGGING!!!