

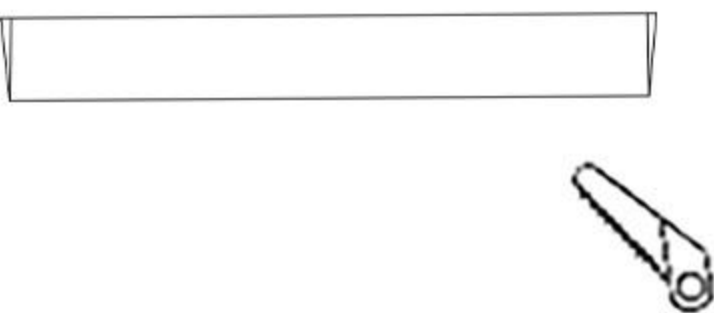
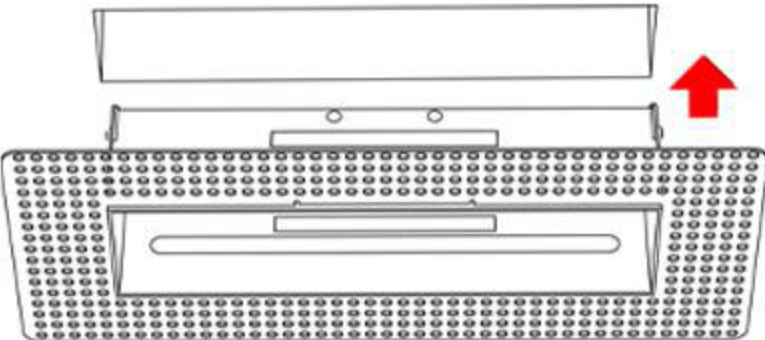
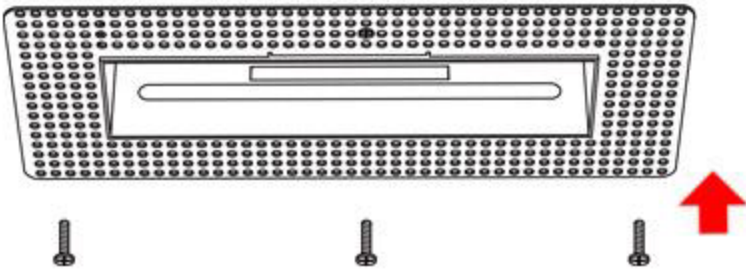
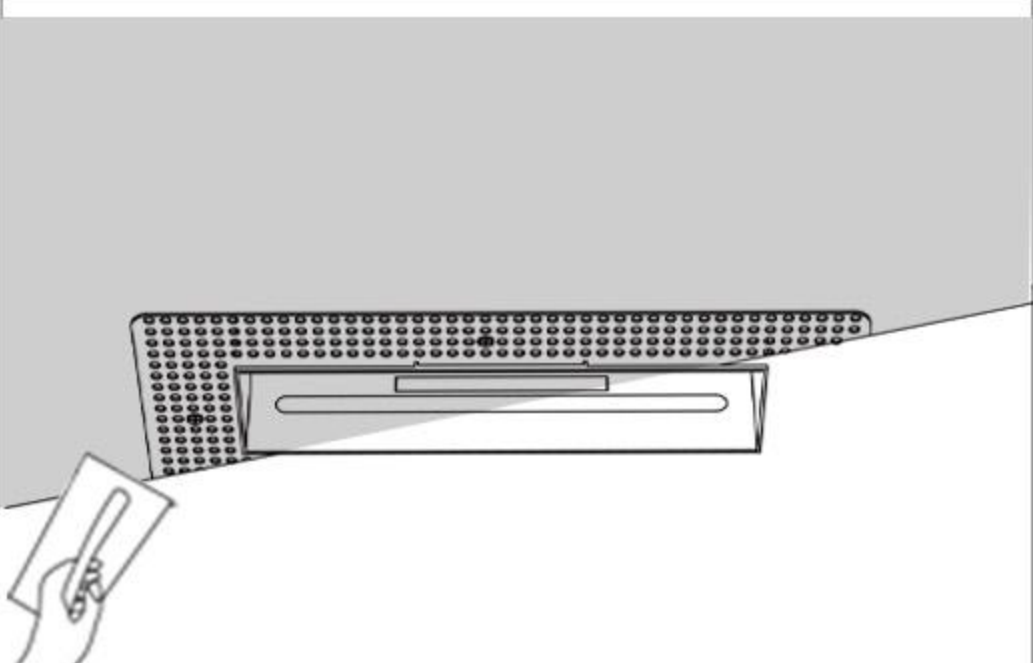


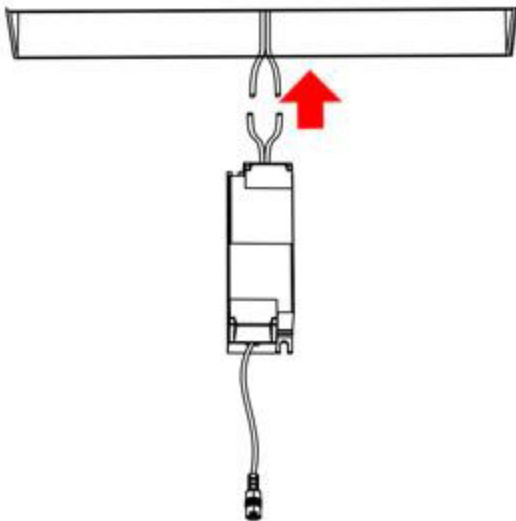

# 6 Inch Recessed Linear Dot Downlight Installation

## Recessed Trimless

 <p>1. Cutout on the ceiling, Cutout size:</p> <p>5 heads: L163*W44*H60mm(6.52"*1.76"*2.4")</p>	 <p>2. Install the embedded part</p>	 <p>3. Fix embedded parts with screws</p>
 <p>4. Plaster-mesh-putty-paint</p>	 <p>5. Wire the driver</p>	 <p>6. Plug in the light</p>
 <p>7. Click the light on</p>	 <p>8. Done</p>	

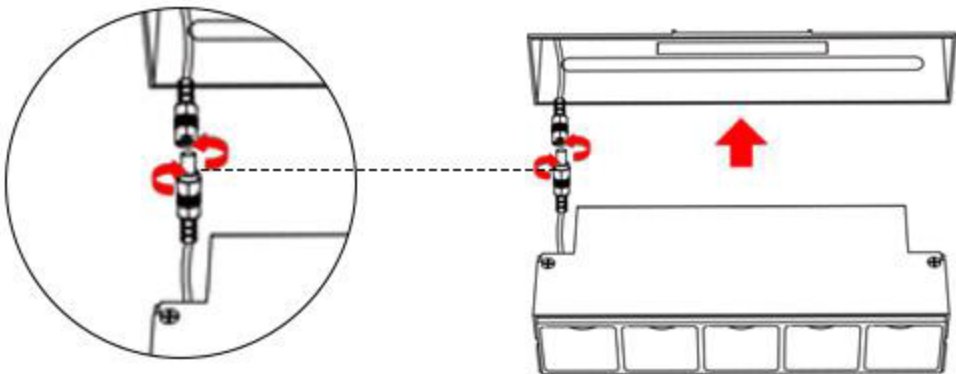

- To secure safety, a qualified electrician is required to install/remove the luminaire.
- POWER OFF!!! NOT HOT PLUGGING!!!